

miConverter[®]
18-Module Rack-Mount
Power Chassis



User Manual

General and Copyright Notice

This publication is protected by U.S. and international copyright laws. All rights reserved. The whole or any part of this publication may not be reproduced, stored in a retrieval system, translated, transcribed, or transmitted, in any form, or by any means, manual, electric, electronic, electromagnetic, mechanical, chemical, optical or otherwise, without prior explicit written permission of Omnitron Systems Technology, Inc.

The following trademarks are owned by Omnitron Systems Technology, Inc.: FlexPoint™, FlexSwitch™, iConverter®, miConverter®, NetOutlook®, OmniLight®, OmniConverter®, RuggedNet®, Omnitron Systems Technology, Inc.™, OST™ and the Omnitron logo.

All other company or product names may be trademarks of their respective owners.

The information contained in this publication is subject to change without notice. Omnitron Systems Technology, Inc. is not responsible for any inadvertent errors.

Warranty

This product is warranted to the original purchaser (Buyer) against defects in material and workmanship for a period of two (2) years from the date of shipment. A lifetime warranty may be obtained by the original purchaser by registering this product at www.omnitron-systems.com/support within ninety (90) days from the date of shipment. During the warranty period, Omnitron will, at its option, repair or replace a product which is proven to be defective with the same product or with a product with at least the same functionality.

For warranty service, the product must be sent to an Omnitron designated facility, at Buyer's expense. Omnitron will pay the shipping charge to return the product to Buyer's designated US address using Omnitron's standard shipping method.

Limitation of Warranty

The foregoing warranty shall not apply to product malfunctions resulting from improper or inadequate use and/or maintenance of the equipment by Buyer, Buyer-supplied equipment, Buyer-supplied interfacing, unauthorized modifications or tampering with equipment (including removal of equipment cover by personnel not specifically authorized and certified by Omnitron), or misuse, or operating outside the environmental specification of the product (including but not limited to voltage, ambient temperature, radiation, unusual dust, etc.), or improper site preparation or maintenance.

No other warranty is expressed or implied. Omnitron specifically disclaims the implied warranties of merchantability and fitness for any particular purpose.

The remedies provided herein are the Buyer's sole and exclusive remedies. Omnitron shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any legal theory.

Environmental Notices

The equipment covered by this manual must be disposed of or recycled in accordance with the Waste Electrical and Electronic Equipment Directive (WEEE Directive) of the European Community directive 2012/19/EU on waste electrical and electronic equipment (WEEE) which, together with the RoHS Directive 2015/863/

EU, for electrical and electronic equipment sold in the EU after July 2019. Such disposal must follow national legislation for IT and Telecommunication equipment in accordance with the WEEE directive: (a) Do not dispose waste equipment with unsorted municipal and household waste. (b) Collect equipment waste separately. (c) Return equipment using collection method agreed with Omnitron.



The equipment is marked with the WEEE symbol shown to indicate that it must be collected separately from other types of waste. In case of small items the symbol may be printed only on the packaging or in the user manual. If you have questions regarding the correct disposal of equipment go to www.omnitron-systems.com/support or e-mail to Omnitron at intlinfo@omnitron-systems.com.

Safety Warnings and Cautions



ATTENTION: Observe precautions for handling electrostatic discharge sensitive devices.



WARNING: Potential damage to equipment and personal injury.



WARNING: Risk of electrical shock.

CUSTOMER SUPPORT INFORMATION

Phone: (949) 250-6510
 Fax: (949) 250-6514
 Address: Omnitron Systems Technology, Inc.
 38 Tesla
 Irvine, CA 92618, USA
 Email: support@omnitron-systems.com
 URL: www.omnitron-systems.com

PRODUCT OVERVIEW

The miConverter 1.5U (2.5 inch) 18-Module Power Chassis is powered by an AC or DC power supply and can accommodate up to eighteen miConverter media converters. This compact chassis is ideal for consolidating individual media converters into a high-density form factor utilizing a single reliable power supply. The chassis can be rack mounted in a 19" or 23" equipment rack.



Figure 1: miConverter 18-Module Power Chassis

Model Number	Description
1020-1	miConverter 18-Module AC Powered Chassis
1025-1	miConverter 18-Module 48VDC Powered Chassis
1026-1	miConverter 18-Module 24VDC Powered Chassis
8092-0	miConverter 23" rack mount brackets

INSTALLATION PROCEDURE

OVERVIEW

The following steps outline the installation procedures for the miConverter Power Chassis.

- Install Power Chassis
- Install the Modules
- Verifying Operation

INSTALL POWER CHASSIS

RACK MOUNTING

When rack mounting the chassis to a 19" standard rack, first attach the two enclosed "L" shaped rack mounting brackets to the chassis using the enclosed screws. The rack mounting brackets can be attached to the chassis using two different hole patterns, depending on the mounting requirement. The different hole patterns will allow two chassis to be installed in a 3U rack space.



Figure 2: Lower Rack Mount Position Figure 3: Upper Rack Mount Position

Mount and attach the chassis (after the mounting brackets are installed) to the rack using the appropriate rack mounting screws (not provided). For optional 23" rack mounting, attach the mounting bracket in the same manner as shown above.

The chassis provides NEBS ground posts to secure a grounding lug and wire from the chassis to the ground post.



Figure 4: NEBS Grounding Lugs

When rack-mounting this equipment, the rack should be appropriately earth-grounded.

AC POWERED CHASSIS

Power source should be available within 5 ft. of the chassis and installed per the National Electrical Code, ANSI/NFPA-70.

Model 1020-1 requires 100-240VAC, 0.4Amp, 50/60Hz. Appropriate overloading protection should be provided on all AC power source outlets utilized.

The standard operating temperature of this equipment is 0 to 50 degrees C. If installed in a closed or multi-chassis rack assembly, the operating ambient temperature of the rack must not exceed the maximum rated 50 degrees C temperature. For wide temperature models, the operating temperature must not exceed 60 degrees C.

Installation of the equipment should be such that the air flow in the front and back of the chassis is not compromised or restricted.

Installing this equipment into a rack in such a way as to make it unstable may cause injury or death. Always make sure that the rack is properly secured, stable, balanced and designed to carry the weight and weight distribution of this equipment.

Never use this equipment to carry any weight except its own. Never use it as a shelf to support the weight of other equipment.

Attach the AC power cord to the back of the chassis and plug into the AC outlets. The Power LED on the front of the chassis will illuminate as well as the Power LED on any installed modules.

NOTE: The fans will not operate until the internal ambient temperature reaches appropriately 50° C. The fans will turn off once the internal ambient temperature drops below appropriately 40° C.



Figure 5: AC Powered Chassis

WARNING!!!

NEVER ATTEMPT TO OPEN THE CHASSIS OR SERVICE THE POWER SUPPLY OR FAN MODULE. OPENING THE CHASSIS MAY CAUSE SERIOUS INJURY OR DEATH. THERE ARE NO USER REPLACEABLE OR SERVICEABLE PARTS IN THIS UNIT.

DC POWERED CHASSIS

This chassis is intended for installation in restricted access areas. (“Les matériels sont destinés à être installés dans des EMBLEMES À ACCÈS RESTREINT”). A restricted access area can be accessed only through the use of a special key, or other means of security.

The over current protection for connection with centralized DC shall be provided in the building installation, and shall be a UL listed circuit breaker rated 20 Amps, and installed per the National Electrical Code, ANSI/NFPA-70.

Appropriate overloading protection should be provided on the DC power source outlets utilized.

Power source should be available within 5 ft. of the chassis. The over current protection for the connection with centralized DC shall be provided in the building installation and shall be a UL listed breaker rated at 15 Amps, and installed per the National Electrical Code, ANSI/NFPA-70.

Model 1025-1 requires 36-60VDC/1.0 Amps power. Model 1026-1 requires 18-36VDC/2.0 Amps power. Appropriate overloading protection should be provided on all DC power source outlets utilized.

WARNING: Only a DC power source that complies with safety extra low voltage (SELV) requirements can be connected to the DC-input power supply.

WARNING REGARDING EARTHING GROUND:

- This equipment shall be connected to the DC supply system earthing electrode conductor or to a bonding jumper from an earthing terminal bar or bus to which the DC supply system earthing electrode is connected.
- This equipment shall be located in the same immediate area (such as adjacent cabinets) as any other equipment that has a connection between the earthed conductor of the same DC supply circuit and the earthing conductor, and also the point of earthing of the DC system. The DC system shall not be earthed elsewhere.
- The DC supply source is to be located within the same premises as this equipment.
- There shall be no switching or disconnecting devices in the earthed circuit conductor between the DC source and the earthing electrode conductor.

The standard operating temperature of this equipment is 0 to 50 degrees C. If installed in a closed or multi-chassis rack assembly, the operating ambient temperature of the rack must not exceed the maximum rated 50 degrees C temperature. For wide temperature models, the operating temperature must not exceed 60 degrees C.

Installation of the equipment should be such that the air flow in the front and back of the chassis is not compromised or restricted.

Installing this equipment into a rack in such a way as to make it unstable **may cause injury or death**. Always make sure that the rack is properly secured, stable, balanced and designed to carry the weight and weight distribution of this equipment.

Never use this equipment to carry any weight except its own. Never use it as a shelf to support the weight of other equipment.

Locate the DC circuit breaker and switch the circuit breaker to the OFF position.

Prepare a power cable using a three conductor insulated wire (not supplied) with 12AWG to 14AWG thickness. Cut the power cable to the length required.

Strip approximately 3/8 of an inch of insulation from the power cable wires.

Connect the power cables to the chassis by fastening the stripped ends to the DC power connector (see Figure 6 for details on terminal block polarity).

WARNING: Note the wire colors used in making the positive, negative and ground connections. Use the same color assignment for the connection at the circuit breaker.

Connect the power wires to the circuit breaker and switch the circuit breaker ON. The Power LED on the front of the chassis will illuminate as well as the Power LED on any installed modules.

NOTE: The fans will not operate until the internal ambient temperature reaches appropriately 50° C. The fans will turn off once the internal ambient temperature drops below appropriately 40° C.



Figure 6: DC Powered Chassis

WARNING!!!

NEVER ATTEMPT TO OPEN THE CHASSIS OR SERVICE THE POWER SUPPLY OR FAN MODULE. OPENING THE CHASSIS MAY CAUSE SERIOUS INJURY OR DEATH. THERE ARE NO USER REPLACEABLE OR SERVICEABLE PARTS IN THIS UNIT.

INSTALL THE MODULES

Eighteen mounting brackets are provided with each chassis to secure the miConverter modules in the chassis. Attach the mounting bracket to the miConverter module using the flat head screw provided (see Figure 7 below).



Figure 7: Module with Mounting Bracket

The chassis provides guides/rails to assist with the insertion of a miConverter module. Align the module with the barrel connector towards the chassis and facing up (mounting bracket tab down). Slowly insert the module with a slight upward motion to allow the mounting bracket to clear the button lip of the chassis. Continue inserting until the barrel connector on the chassis inserts into the module and the mounting bracket is flush with the bottom lip of the chassis. Secure the module to the chassis by attaching the mounting bracket to the bottom lip of the chassis using the pan head screw provided.

NOTE: The chassis only supports miConverter modules powered through the barrel connector. miConverter modules with terminal block connectors are not supported.

NOTE: The miConverter S-Series is not compatible with the chassis.

NOTE: Remove any rubber feet from the module before installing it into the chassis.



Figure 8: Module Insertion

To remove the miConverter module, remove the screw from the mounting bracket, tilt up on the module and slide the module out of the chassis.

VERIFY OPERATION

The chassis provides a POWER LED located on the front left top corner of the chassis. When the POWER LED is solid green, the chassis is powered.

SPECIFICATIONS

Chassis Type	AC Powered Chassis	24VDC Powered Chassis	48VDC Powered Chassis
Module Capacity	18		
Input Power Requirements (typical)	100 to 240VAC 50 to 60Hz 0.4A @ 120VAC	+/- 18 to 36VDC 2.0A @ 24VDC	+/- 36 to 60VDC 1.0A @ 48VDC
Connector	IEC320	3-pin Terminal	3-pin Terminal
Compliances	Safety: UL, cUL, CE, UKCA EMI: FCC Class A ACT: TAA, BAA, NDAA		
Environmental	RoHS, WEEE, REACH		
Temperature	Standard Operating: 0 to 50°C Wide Operating: -40 to 60°C Storage: -40 to 80°C		
Dimensions W x D x H	17.5" x 9.5" x 2.5" (444.5 mm x 241.3 mm x 63.5 mm)		
Weight	7.20 lbs. (3.27 kg)		
Humidity	5 to 95% (non-condensing)		
Altitude	-100m to 4000m		
MTBF (hrs)	526,000	486,000	1,081,000

MECHANICAL

